

HIP STREET

Wii Sports Resort 10 Pack

Introduction

Thank you for purchasing the Hip Street Sports Resort 10 Pack. To ensure the best performance of your product, please read this manual carefully and keep for future reference.

| | | |
|----------------------|--------------------|------------------------|
| Box Contents | 1 x Sword | 1 x Frisbee |
| 1 x Handle | 1 x Golf Club | 2 x Wrist strap |
| 1 x Bow | 1 x Jet Ski Handle | 1 x Instruction Manual |
| 1 x Ping Pong Paddle | 1 x Paddle | |

Instructions for ping pong paddle, paddle, sword and golf club

1. Select one of the sports accessories, pull back the slide lock, line up with the handle clips and push down until the slide lock can release
2. Assembling: insert the Wii remote into the handle with the IR sensor towards the attachment. Connect the MotionPlus / Nunchuk.
 - a. Ensure both the handle and accessory are securely fixed to the Wii remote before playing
3. Disassembling: disconnect the MotionPlus / Nunchuk and push the controller out from the "B" button. Pull back the slide lock on the accessory and pull the clips apart
4. During game play, use the D pad on the Wii remote to make menu selections.
5. To use the on screen cursor; remove the Wii remote control from the handle if the attachment interferes with the IR pointer.

Instructions for bow

1. Assembling: insert the Wii remote into the handle with the IR sensor towards the larger opening and connect the MotionPlus / Nunchuk.
2. Disassembling: disconnect the MotionPlus / Nunchuk and push the controller out from the "B" button

Instructions for Jet Ski handle

1. Assembling: insert the Wii remote into the right holder with the IR sensor towards the centre of the accessory
 - a. Insert the Wii Nunchuk into the left holder
 - b. Connect the MotionPlus / Nunchuk
2. Disassembling; disconnect the MotionPlus / Nunchuk and push the remote out from the "B" button

Instructions for frisbee

1. Assembling: insert the Wii remote into the Frisbee; it will only fit one way. If you have a Nintendo silicon skin over your remote, remove the inlay first.
2. Disassembling: push the remote out from the "B" button

Note:

The handle may interfere with the IR pointer on the Wii remote and affect the interaction with the Wii console during the setup procedure. This can be solved by using the "+ control pad" to make the selections during the setup procedure. This will not affect the wireless connection between the Wii console and remote.

Important Safeguards & Precautions

- Children should always be supervised when using this product.
- This product is for indoor use only.
- Do not use the Sports Pack if the parts are damaged.
- Do not disassemble; there are no serviceable parts inside.
- For external cleaning, use a soft, clean, damp cloth only. Use of detergents may damage the finish
- Wear the wrist strap while using the controller and hold securely
- Stay at least three feet (1m) away from the TV or other objects and people while playing
- **DO NOT LET GO OF THE CONTROLLER WHILE PLAYING OR IT COULD CAUSE DAMAGE AND INJURY**

Not recommended for children under 8 years of age.

Nintendo® Wii™, Nunchuk™ and MotionPlus™ are registered trademarks of Nintendo of America Inc.

This product is not sponsored, endorsed or approved by Nintendo of America Inc.

Limited Warranty- Canada & US Only

The limited warranty set forth below is given by Hip Street. ("Hip Street") with respect to the Hip Street brand product (the "product") that you have purchased, when purchased and used in Canada or USA. The product that you have purchased is the only product to which this warranty card and the limited warranty provided by Hip Street and stated on the card apply.

Your product, when delivered to you in new condition in its original container, is warranted against defects in materials or workmanship as follows: for a period of one (1) year from the date of original purchase or a defective product returned to a Hip Street repair facility or a Hip Street Authorized Service Facility ("ASF") for such product, as applicable, and determined to be defective upon inspection, will be exchanged for new or refurbished product, as determined by the ASF. Warranty repair or replacement shall not extend the original warranty period of the defective product. This limited warranty does not cover any supplies or accessories.

Proof of purchase that is a copy of the invoice or receipt to evidence the date of purchase will have to be provided to claim under the warranty.

This limited warranty shall only apply if the product is used in conjunction with compatible equipment and compatible software, as to which items Hip Street shall have no responsibility.

This limited warranty covers all defects encountered in normal use of the product, and does not apply in the following cases: (a) Loss of or damage to the product due to abuse, mishandling, improper packaging by you, alteration, accident, electrical current fluctuations, failure to follow operating, maintenance or environmental instructions prescribed in Hip Street's instruction manual, or service performed by other than a Hip Street repair facility or an ASF. (b) Use of parts or supplies (other than those sold by Hip Street) that cause damage to the product or cause abnormally frequent service calls or service problems. (c) If the product has had its serial number or dating or identification marks altered or removed. Any physical damage will void warranty unless specified otherwise.

NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER EXPIRY OF THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE. All inquiries with regards to the product warranty may be directed to support@hipstreetonline.com

NO OTHER EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND HIP STREET. (SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.)

HIP STREET SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, INCONVENIENCE, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE OR MISUSE OF, OR INABILITY TO USE THE PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF HIP STREET HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST HIP STREET BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY HIP STREET WHICH CAUSED THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE THE PRODUCT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF HIP STREET. (SOME PROVINCES/STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THE PRODUCT, OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT, AND STATES YOUR EXCLUSIVE REMEDY.