

hipstreet[®]

HS-W8SPEN

Ghost Writer

User Manual



April 2013

Please read this user's manual carefully before use.

CONGRATULATIONS!

Thank you for your purchase of this Hipstreet product and we hope you enjoy using it. Please visit our website at www.hipstreet.com.

Please ensure that you fully read and understand the information within this user manual prior to using your product. It is advised that you keep this user manual in a safe place for future reference. We sincerely hope that this high quality product offers you endless hours of entertainment.

Important safety precautions

- Always follow these basic safety precautions when using the unit. This will reduce the risk of product damage and personal injury.
- Do not disassemble, repair or modify the unit by yourself. Refer servicing to qualified personnel.
- Do not dispose of the unit in extreme heat to avoid explosion.
- Keep the unit away from direct sunlight or heat source.
- Do not expose the unit to liquid or moisture to avoid any malfunction.
- Do not use the unit in a rather dry environment to avoid static.
- Never apply heavy impact on the unit like dropping it or placing it on a magnet.

- Clean only with a dry cloth. Make sure the unit is turned off before cleaning. Do not use liquid cleanser.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class C digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses

and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Warning

 
 
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser)

gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Canadian ICES-003 and RSS-210

Product Description

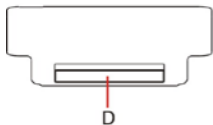

A. USB Port – connect to computer through the USB cable

B. Pen Low battery indicator

C. Power indicator for the base unit

D. Magnet – attach the base unit onto the metal strip.

E. Metal strip – Attached to the edge of Notebook display.

F. Side Button –2-point Touch button

G. Stylus – Inserted into the pen slot.



Package Contents



Base unit



Metal strip



USB Cable



Pen batteries



Stylus



Digital Pen

Setup

1. Insert Pen Batteries

- Remove the battery compartment cover.
- Insert two SR41 batteries (Included), with the positive poles facing up as shown.
- Put back the battery compartment cover.



 
 
⚠ WARNING: *Do not attempt to open the pen. That may cause the pen to malfunction.*

2. Insert Stylus

To insert the stylus,

- Slide the stylus into the lower edge of the pen. [1]
- Gently press stylus until it is locked securely in place. [2]



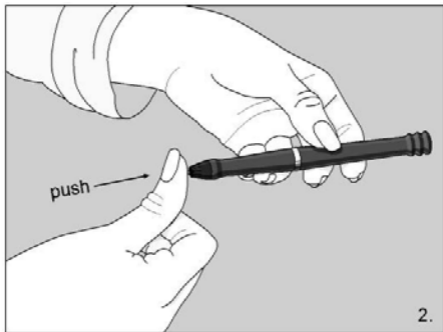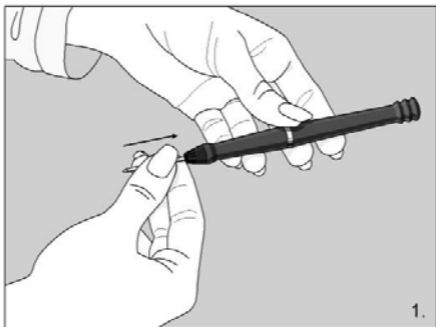


3. Attach the Base Unit to Computer Display

- a. Connect the base unit to the computer through the USB cable. (Included)



 - b. Peel and stick the metal strip to the edge of the display. Center the magnet on the display.

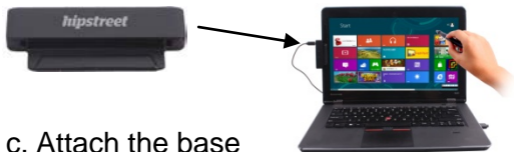

- c. Attach the base unit onto the metal strip with magnet.

 
Note: Some notebooks have a sensor at the edge of the display, and it may cause the notebook to sleep when the metal strip gets close to it. Before attaching the base unit and metal strip

onto the edge, please find an appropriate position to avoid interference with this sensor.

Calibration

In order to make the unit function properly, follow these steps to calibrate the screen with the pen.


- (1) Move mouse to the top right hand corner of your screen and click on Search when it appears.

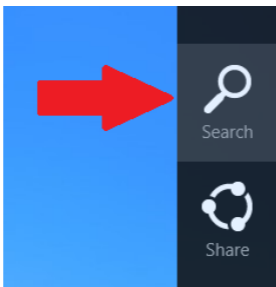


(2) Search for “Control Panel” and select it.



 
(3) Search for “tablet pc” in the top right hand corner of the window.

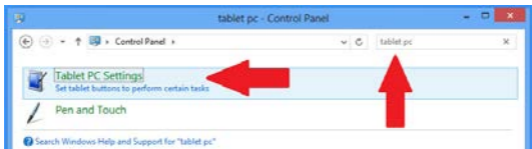

 (4) Select “Calibrate...”

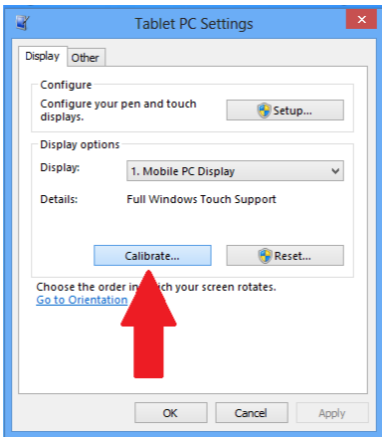

 - (5) Tap the centre of each cross-hair to complete the calibration process.

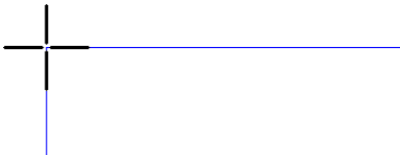

- (6) Once complete, you are ready to go!

Note:

- *If you want to recalibrate the screen at a later time, click “Reset” in step 5 to clear the previous calibration data before you click “Calibrate”.*
- *Don’t move the Metal Strip’s position after calibration, otherwise you must recalibrate.*

4. Functionality

Note: Calibration must be completed first before this step.

 
- **Left Click:** Tap on an item to open an application or page.



- **Drag:** Tap and hold your pen on an item and then drag it.



- Sliding the pen to the left from the right edge of your display will bring up a menu:

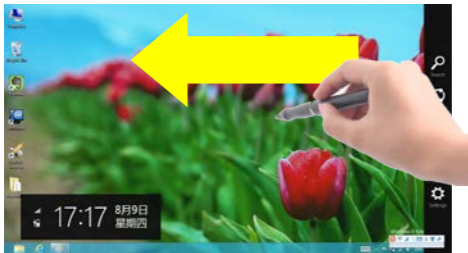


- **Zoom:**

- a) Hold the **Side Button** on the pen.


- b) Touch and hold the point on the screen where you would like to zoom.

Slide to another point, this will zoom in.

 To zoom out, slide back towards the first point.

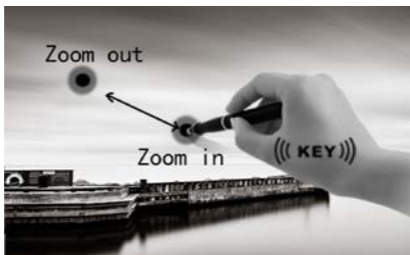

 - **Right click:** Tap and hold your pen tip on an item for a few seconds and then release to show a pop-up menu.

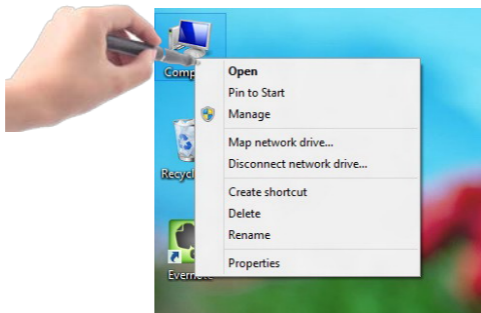

- **Close a Window:** Drag from the top to the bottom to close current window or application.



Need assistance? Please call us!

If you encounter any difficulties with this product, please visit our website at www.hipstreet.com and review our support section or call us. Our representatives are ready to help you with any questions about your product. We can guide you through connections, first-time use, or any of the features. Just give us a call or send us an email.

Customer & Technical Support:
1-888-456-2426

Monday through Friday: 8:30am – 5:00pm

Email: support@hipstreet.com

We want you to start enjoying your product right away!

Product and Battery Disposal

This product contains a built-in lithium battery and should not be disposed of in normal household waste. The battery in this device is not intended to be removed by the individual or end user. For disposal and recycling, please contact your local waste management authorities.

The recycling and processing of electronic waste will make a significant contribution towards helping protect the environment.